

- 02. 현수막봉 (PLACARD BATTEN)
- 01. 앞무대조명 (APRON LIGHT)
- 00. 영점선 (ZERO LINE)
- 01. 안전막 (SAFETY CURTAIN)
- 02. 연막 (HOUSE CURTAIN)
- 03. 장치봉 1 (#1 SET BATTEN)
- 04. 다리막 1 (#1 HOUSE LED)
- 05. 다리막 2 (#2 HOUSE LED)
- 06. 조명봉1 + 다리막 1 (#1 LIGHT BATTEN + #1 HOUSE BORDER)
- 07. 영사막 + 가림막 (SCREEN + COVER CURTAIN)
- 08. 천장음향반사판 1 (#1 ACOUSTICAL SHELL-CEILING)
- 09. 다리막 3 (#3 HOUSE LED)
- 10. 장치봉 2 (#2 SET BATTEN)
- 11. 조명봉2 + 다리막 2 (#2 LIGHT BATTEN + #2 HOUSE BORDER)
- 12.
- 13. 장치봉 3 (#3 SET BATTEN)
- 14. 필막 1 (#1 DRAW CURTAIN)
- 15. 조명봉 3 + 다리막 3 (#3 LIGHT BATTEN + #3 HOUSE BORDER)
- 16. 천장음향반사판 2 (#2 ACOUSTICAL SHELL-CEILING)
- 17. 장치봉 4 (#4 SET BATTEN)
- 18. 장치봉 5 (#5 SET BATTEN)
- 19. 조명봉 4 + 다리막 4 (#4 LIGHT BATTEN + #4 HOUSE BORDER)
- 20. 장치봉 6 (#6 SET BATTEN)
- 21. 필막 2 (#2 DRAW CURTAIN)
- 22. 장치봉 7 (#7 SET BATTEN)
- 23. 하늘막상단조명 + 다리막 5 (UPPER CYC. LIGHT + #5 HOUSE BORDER)
- 24. 장치봉 8 (#8 SET BATTEN)
- 25. 장치봉 9 (#9 SET BATTEN)
- 26. 장치봉 10 (#10 SET BATTEN)
- 27. 하늘막 (CYCLORAMA)
- 28. 검정하늘막 (BLACK CYCLOARAMA)

